



**INTENTIONALLY LEFT BANK**

## CONTENTS

<b>SAFETY PRECAUTIONS</b> .....	<b>4</b>
<b>BACK UP SD MEMORY CARD DATA</b> .....	<b>5</b>
<b>GPS OPERATION</b> .....	<b>5</b>
<b>FRONT PANEL CONTROLS</b> .....	<b>6</b>
<b>POWER ON / OFF</b> .....	<b>7</b>
<b>SYSTEM MENU</b> .....	<b>7</b>
<b>INSERT / EJECT DISK</b> .....	<b>7</b>
<b>INSERT / EJECT MEMORY CARD</b> .....	<b>7</b>
<b>DVD / CD OPERATION</b> .....	<b>7</b>
<b>FM / AM RADIO OPERATION</b> .....	<b>8</b>
<b>BACK LCD / REAR SEAT ENTERTAINMENT OPERATION</b> .....	<b>8</b>
<b>BLUETOOTH OPERATION</b> .....	<b>8</b>
<b>iPOD OPERATION</b> .....	<b>9</b>
<b>SYSTEM SETTINGS</b> .....	<b>9</b>
<b>TPMS AND INFO (Not Available)</b> .....	<b>10</b>
<b>REVERSE CAMERA OPERATION</b> .....	<b>10</b>
<b>HELP &amp; SUPPORT</b> .....	<b>11</b>

## SAFETY PRECAUTIONS



### WARNING

This symbol means important instructions. Failure to heed them can result in serious injury or death.

#### INSTALL THE PRODUCT CORRECTLY SO THAT THE DRIVER CANNOT WATCH TV / VIDEO UNLESS THE VEHICLE HAS STOPPED AND THE PARKING BRAKE IS APPLIED.

It is dangerous for the driver to watch the TV/Video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur. If the product is not installed correctly, the driver will be able to watch the TV/Video whilst driving the vehicle and may be distracted from looking ahead causing an accident. The driver or other people could be severely injured.

#### DO NOT OPERATE ANY FUNCTIONS THAT CAN CAUSE DISTRACTIONS WHILE DRIVING.

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

#### KEEP SMALL OBJECTS OUT OF THE REACH OF CHILDREN.

Swallowing Small objects may result in serious injury. If swallowed, consult a physician immediately.

#### DO NOT DISASSEMBLE OR ALTER THE PRODUCT.

Doing so may result in an accident, fire or electric shock.

#### DO NOT USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.

Use of this product other than its designed application, may result in fire, electric shock or other injury.

#### USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND. (Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

#### DO NOT BLOCK VENTS OR RADIATOR PANELS. Doing so may cause heat to build up inside and may result in fire.

#### MINIMISE DISPLAY VIEWING WHILE DRIVING. Viewing the display may distract the driver from looking ahead of the vehicle and cause an accident.

#### DO NOT WATCH VIDEO / TV WHILE DRIVING. Watching the video may distract the driver from looking ahead of the vehicle and cause an accident.

#### KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISE WHILE DRIVING.

Failure to do so may result in an accident.

#### HALT USE IMMEDIATELY IF A PROBLEM OCCURS.

Failure to do so may cause personal injury or damage to the product. Return it to your authorised VMS dealer or the nearest VMS Service Centre for repairing.

#### DO NOT PLACE HANDS, FINGERS OR FOREIGN OBJECTS IN INSERTION SLOTS OR GAPS.

Doing so may result in personal injury or damage to the product.

#### DO NOT MIX NEW BATTERIES WITH OLD BATTERIES. INSERT WITH THE CORRECT BATTERY POLARITY.

When inserting the batteries, be sure to observe proper polarity (+ and -) as instructed. Rupture or chemical leakage from the battery may cause fire or personal injury.

#### Product Cleaning

Use a soft dry cloth for periodic cleaning of the product. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

#### Temperature

Be sure that the temperature inside the vehicle is between 0°C (+32°F) and +45°C (+113°F) before turning your unit on.

#### Moisture Condensation

You may notice the disc playback sound wavering due to condensation. If this happens, remove the disc from the player and wait about an hour for the moisture to evaporate.

#### Damaged Disc

Do not attempt to play cracked, warped, or damaged discs. Playing a bad disc could severely damage the playback mechanism.

#### Maintenance

If you are experiencing problems, do not attempt to repair the unit yourself. Return it to your VMS dealer.

#### Never Attempt the Following:

Do not grip or pull out the disc while it is being pulled back into the player by the automatic reloading mechanism.

Do not attempt to insert a disc into the unit when the unit power is off. Doing so may cause damage to the DVD / CD mechism.



#### Inserting Discs

Your player accepts only one disc at a time for playback. Do not attempt to load more than one disc.

Make sure the label side is facing up when you insert the disc.

Your player will automatically eject any disc that is inserted incorrectly. If the player continues to eject a correctly inserted disc, push the Power button. Playing a disc while driving on a very bumpy road may result in skips, but this will not scratch the disc or damage the player.

 
#### Irregular Shaped Discs

Be sure to use round shaped discs only for this unit and never use any special shaped discs. Use of special shaped discs may cause damage to the mechanism.




#### New Discs

As a protective measure to prevent the Disc from jamming, the DVD player will automatically eject discs with irregular surfaces or which have been inserted incorrectly. When a new disc is inserted into the player and ejected after initial loading, using your finger, feel around the inside of the centre hole and outside edge of the disc. If you feel any small bumps or irregularities, this could inhibit proper loading of the disc. To remove the bumps, rub the inside edge of the hole and outside edge of the disc with a ball-point pen or other such instrument, then insert the disc again.

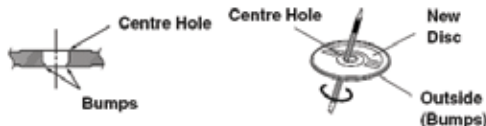

#### Correct Handling

 Do not drop the disc while handling. Hold the disc so you will not leave fingerprints on the surface. Do not affix tape, paper, or gummed labels to the disc. Do not write on the disc.

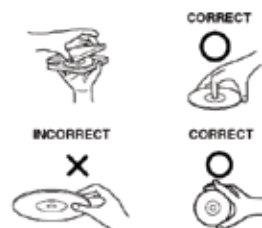

#### Disc Cleaning

Fingerprints, dust, or soil on the surface of the disc could cause the DVD player to skip. For routine cleaning, wipe the playing surface with a clean, soft cloth from the centre of the disc to the outer edge. If the surface is heavily soiled, dampen a clean, soft cloth in a solution of mild neutral detergent before cleaning the disc.

#### Using compact discs (CD/CD-R/CD-RW)

If you use unspecified compact discs, correct performance cannot be guaranteed. You can play CD-Rs (CD-Recordable)/CD-RWs (CD Re Writable) which have been recorded only on audio devices.

You can also play CD-Rs/CD-RWs containing MP3/WMA formatted audio files.

• Some of the following discs may not play on this unit:

Flawed discs, discs with fingerprints, discs exposed to extreme temperatures or sunlight (e.g., left in the car or in unit), discs recorded under unstable conditions, discs on which a recording failed or a re-recording was attempted, copy protected CDs which do not conform to the audio CD industry standard.

• Use discs with MP3/WMA files written in a format compliant with this unit.

### To customers using CD-R / CD-RW

- If a CD-R/CD-RW cannot be played, make sure the last recording session was closed (finalised).
- Finalise the CD-R / CD-RW if necessary, and attempt playback again.

### Installation Location

Make sure the unit will not be installed in a location subjected to:

- Direct sun and heat
- High humidity and water
- Excessive dust
- Excessive vibrations

### BACK UP SD MEMORY CARD DATA

 
#### DATA REDUNDANCY

Memory Cards utilized in this product is of an automotive grade. However, data corruption may still occur. To ensure data redundancy, we recommend backing up the data onto a computer.

- Back up the original data.
- Back up your own data.

#### BACK UP DATA FROM MEMORY CARD TO A COMPUTER

1. Insert Micro SD card into a SD card reader on the computer.
2. In My Computer, the SD card will appear as a removable drive. For easy identification, all VMS Touring SD cards are programed to appear with a VMS icon.



3. Select all the data on the SD card & select COPY.
4. Paste the data on to the computer.
5. If the data on the SD card becomes corrupt, the sd card can be formatted and the backup data on the computer can be copied onto the card.

**PLEASE NOTE:** The data on the SD card is encrypted. Copying the data onto a different SD card is not possible. The system will only work with the genuine memory card.

**Loss or corruption of data on the memory card is not covered under warranty. Ensure the data is backed up onto another form of media as soon as the possible.**

**If you are not sure on how to back up data contained on the memory card, contact your VMS dealer before any attempts are made. Backing up data is not VMS or the dealer's responsibility.**

**You may also request VMS to back up the DATA onto a DVD-R disk. A service charge of \$55 (excluding postage) apply. To access this service, contact us via email [support@vms4x4.com](mailto:support@vms4x4.com)**

**Business Hours: 9am to 5pm Monday to Friday, AEST.**

**VMS will not accept responsibility for items sent to the office that do not contain an RA number which, is given to you over the phone.**

**To request an RA number for warranty, please visit the VMS website, click on support, and press the "warranty request form" button.**

**Alternatively go to: [www.vms4x4.com/warranty\\_request](http://www.vms4x4.com/warranty_request) or visit your VMS dealer for assistance.**

### GPS OPERATION

The GPS console can launch both street & off road navigation software.

To access the GPS console, press **[GPS]** in the main menu.

### GPS CONSOLE MENU

 


**STREET NAVIGATION** - Launches street nav.

**OFF ROAD GPS** - Launches the preset Off Road navigation software.

**SETUP** - Choose your default off-road navigation software to launch when the Off Road navigation icon is pressed. Default is MudMap

### OFF ROAD GPS MENU (STREET AND TOPO UNITS ONLY)

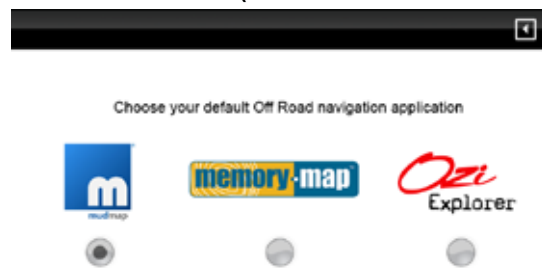

The Off road GPS contains 3 applications, MudMap, Memory Map and Ozi Explorer (DEMO VERSION ONLY).


Once a software has been selected, it will automatically launch the next time GPS console starts.

To return to the GPS console when in either Street Nav or Off Road GPS, select the exit option in either software.

### NAVIGATION SOFTWARE - MORE INFORMATION

 Please refer to your GPS navigation manual provided for more information on how to use the GPS software. For further information please visit the VMS website.

**VMS Touring 7500 common interface buttons**

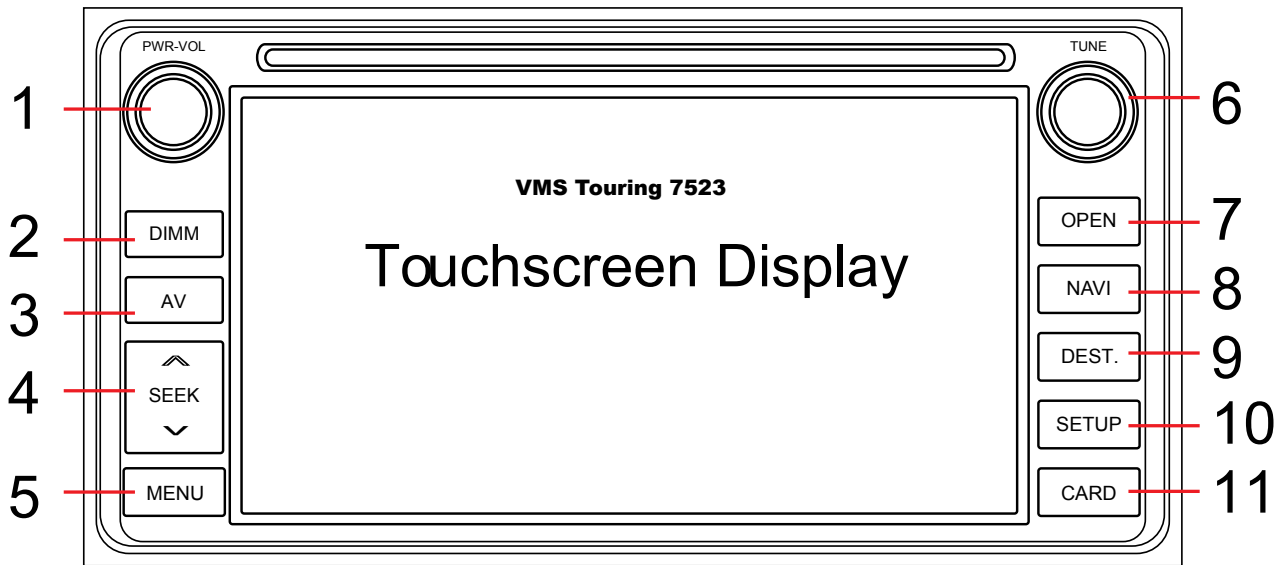

**FRONT PANEL CONTROLS - 7523 (EXAMPLE)**

No.	Function	Description
1	PWR-VOL	Tune knob to increase / decrease volume. Press to MUTE. Press and hold to power on / off.
2	DIMM	Press to increase / decrease screen brightness.
3	AV	Cycles through all AV functions.
4	SEEK + / - Up or Down	Radio: Change station up or down. CD/DVD: Change track up or down. iPOD: Change track up or down.
5	MENU	Go to System Menu.
6	TUNE	Manually tune radio stations. Turn the knob to turn up or down in frequency.
7	OPEN / ▲	Ejects the CD / DVD
8	NAVI	Display GPS console.
9	DEST.	In iGo street navigation, this will open the find place screen.
10	SETUP	Go to setup menu.
11	CARD	Open to insert or remove your micro SD card. (Included)

**FRONT PANEL CONTROLS - OTHER COMMON FUNCTIONS (FUNCTIONS VARIE BETWEEN MODELS)**

	FM	Go to FM radio menu.
	DVD	Go to DVD / CD menu.
	CDC	Go to CD changer menu.
	DEST.	NO FUNCTION (FOR FUTURE EXPENDABILITY).
	LOCA.	Locks into your current location, (Function available only on Street Navigation)
	INFO	Go to info menu.
	SCAN + / -	Tune radio station + or -
	⏻/🔇	Turn screen off / Mute audio

**POWERING ON/OFF**

At key ignition, the system will automatically switch on. When the ignition is switched off, the system will power down. To manually power the system on or off, press and hold the **[PWR/VOL]** knob.

**SYSTEM MENU**

**TO SELECT A FUNCTION, TOUCH THE SCREEN**



**RETURN TO SYSTEM MENU:** To return to the main menu at any time, press the **[MENU]** button on the front fascia.

**SYSTEM MENU FUNCTIONS**

- [DVD]** - Play DVD/CD or connected USB flash memory. (Supported formats on USB: mp3 & WMA).
- [CDC]** - CD changer can be accessed via this icon (only when CDC is connected).
- [Radio]** - Operate FM or AM radio.
- [iPOD] or [AUX]** - Operate connected iPOD or AUX input. This icon can be changed in "SETUP" to perform either of these functions.
- [TV]** - (Not Available)
- [GPS]** - Enters the GPS console.
- [R. ENT] / [BACK LCD]** - Controls for rear seat entertainment.
- [BT] / [BLUETOOTH]** Controls for Bluetooth phone connectivity.
- [SETUP]** - Configure system settings.
- [INFO]** - Displays TPMS & volt meter information. (No longer available)
- [DARK / MIDDLE / BRIGHT]** - Adjust LCD screen brightness.
- [BLUE / ORANGE]** - Toggles interface from Blue to Orange themes. Unit must be restarted by turning the acc on & off.

**INSERTING A DISC**

1. Place the disc in the loader slot and the system will automatically insert the disc into the loader.

**EJECTING A DISC**

1. Press the **[OPEN]** button  
 2. Press the **[OPEN]** or **[EJECT]** button (depending on model) and the disc will automatically be ejected from the loader. Remove the disc.

**MEMORY CARD**

**COMPATIBLE MEMORY CARDS**

1GB, 2GB 4GB, 8GB class 4 micro sd cards are compatible.

All navigation software(s) and map(s) are stored on the memory card. Navigation will not operate without the memory card.

**INSERT SD CARD**

**PLEASE NOTE:** The memory card slot is directional. Ensure the card is in the correct orientation. Incorrect orientation can cause physical damage to the card slot.

Insert the card into the slot and press gently until the card locks into position.

**REMOVE SD CARD**

Press the Memory Card gently until card unlocks.

**DVD/CD playback**

1. Insert disc & select DVD/CD from the main menu.

The controls below are common to both CD, DVD & USB flash memory playback.

- Return to previous menu.
- Select to play DVD or CD.
- Select to play mp3 music from USB flash memory utilising standard DVD controls.
- seek back
- seek forward
- play / pause
- stop
- next track
- prev track
- Audio settings
- EQ settings
- enable album repeat.
- enable random track selection.
- enable track scan, plays first 10 sec of every track on the cd.

**CD MENU**

When an audio CD is inserted, the CD menu will appear.



**TRACK LIST MENU**

**[TRACK LIST]** - brings up a list of all available tracks on an audio CD (not mp3 CD).



**DVD MENU**

When a DVD is inserted, the DVD menu will appear.



- Display picture in 4:3 ratio (letterbox).
- Display picture in 16:9 ratio (widescreen).
- Display picture full screen.
- Display DVD picture. **PLEASE NOTE:** This icon can only be activated while the vehicle is not in motion & the park brake is applied.

**FM / AM RADIO**

To access FM or AM radio, press the **[RADIO]** button in the Main Menu.



- 6 FM presets
- 6 FM presets
- 6 AM presets

To switch between FM1 / FM2 / AM, press the corresponding icons.

- Step up or down (manually change the radio frequency by 1 step).
- Automatically scan for radio stations.
- Traffic Announcement (Not available in Australia)
- Alternate Frequency (Not available in Australia)

**[Preset locations]** 1 station can be stored in each location.



- Audio settings
- EQ settings

**SCAN AND STORE RADIO STATIONS**

1. Press **[SCAN]** until the desired station appears. Press and hold the desired preset location and the station will be saved in this position.
2. Repeat the above for other stations.

**MANUALLY TUNING A RADIO STATION**

If the automatic scan did not find a station, you can manually adjust the station by pressing the step up or down buttons.

**BACK LCD (REAR SEAT ENTERTAINMENT)**

The 7500 series is Rear Seat Entertainment ready. It has the ability to:

Send DVD video & audio to a display located at the rear of the vehicle. Rear Seat Passengers can watch a movie with wireless headphones. At the same time, navigation is displayed up front with either radio or iPod playback through the vehicle sound system. All controls for rear seat dvd are accessible via the touch screen.

To access Rear Entertainment controls, press **[BACK LCD]** in the main menu.

**PLEASE NOTE:** Rear Entertainment option needs to be [ON] in the settings. If its not on, the mp3 menu will be displayed instead.

**BACK LCD MENU**



**[DVD]** play DVD/CD inserted in the 7000 series.

- Play / Pause
- Stop
- Previous track
- Next track

**BLUETOOTH PHONE CONNECTIVITY**

To access the Bluetooth Phone menu, press **[BLUETOOTH]** in the main menu.

**PAIR YOUR PHONE**

1: Press the **[PAIR]** button.

A tip menu appears. You will need to ensure the "Bluetooth On" button is enabled.



2: On your mobile phone, enter the Bluetooth menu & search for a new device. Follow the on screen instructions.

3: Enter the password = 0000

4: The phone should now be paired.

If you phone does not pair, it may not be Bluetooth V2.0 compliant. Please contact the manufacturer of the mobile phone to obtain further information.

**MAKING A PHONE CALL**

A call can be made from either the handset or from the touch screen. Dialing from the handset: Dial from the handset as usual & the call will be connected to the hands free automatically.

Dialing from the touch screen: Enter the Phone number on the keypad using the touchscreen and press the dial button.

Dialing from recent history: Select the Phone number to call from the **[RECENTS]** menu, press the dial button on the touch screen.

Answering a phone call: Press the **[DIAL]** button.

Rejecting a phone call: Press the **[REJECT]** button



**PHONE MENU**



**Keypad**



- Connected phone name.
- Pair phone.
- Handsfree mode is activated.
- Switch call back to handset.
- Turn Bluetooth On/Off.
- End / Reject call.
- Dial / Accept call.
- Access RECORDS / CALL HISTORY.
- Delete / Backspace.
- BT Connection status.

 
**[RECORDS] MENU**



**Received calls history**



**Dialled calls history**

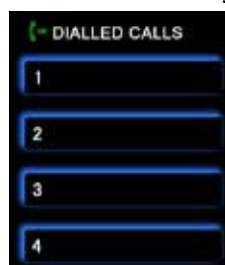

- Delete call history
- To call from these menus, select the phone number to call, then press the **[CALL]** button.

- To access your mobile phones history and contacts press Phone History

**PHONE HISTORY MENU**



- Displays the MISSED calls from your mobile phone
- Displays the RECEIVED calls from your mobile phone
- Displays the DIALLED calls from your mobile phone
- Displays your SIM CONTACTS from your mobile phone
- Displays your PHONE CONTACTS from your mobile phone

**IPOD OPERATION**

Ensure iPod is connected to the iPod cable. To access the iPod menu, press **[IPOD]** in the main menu.

**IPOD MENU**



- Current track name.
- Current artist name.
- Current album name.
- Play / pause.
- Next / Previous.
- Previous Track.
- Next Track.
- If enabled, the ipod will be fully controlled on the VMS unit with on screen controls.
- If disabled, the iPod can be controlled directly from its own controls while connected to the system. The ipod will still charge, and the audio will still out via your vehicles speakers.
- Press to shuffle your playlist
- Press to loop the playback of your playlist
- Press to search the ipods database of songs

 


- Audio settings



- EQ settings

**iPOD SEARCH MENU**

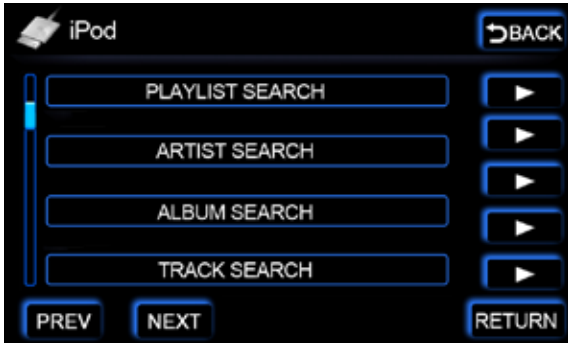

**PLAYLIST SEARCH** - Search for a Playlist and play related songs.  
**ARTIST SEARCH** - Search for an artist and play related songs.  
**ALBUM SEARCH** - Search for an album and play related songs.  
**TRACK SEARCH** - Search and play for a song / track.

**SETUP MENU**

To access the setup menu, press **[SETUP]** in the main menu.

**SETUP MENU PAGE 1**



**NEXT** - press to access next / previous page of setup

**CALIBRATE TOUCH** - Calibrate the touch screen panel, The touch screen requires recalibration from time to time.

**AUTO SWITCH TO GPS** - If turned on, any menu option outside the GPS will return to the GPS console automatically after 15 seconds.

**BRAKE CHECK** - If turned on and correctly wired, DVD Videos will not be able to be displayed unless the handbrake is on.

**WHEEL CONTROL** - If turned on, this will enable the steering wheel controls for your vehicle. Steering wheel code may be required.

**GPS VOICE** - If turned on, the GPS Audio will be enabled while in a menu outside the GPS.

**HEADLIGHT CHECK** - If turned on and correctly wired, the buttons will illuminate if the vehicles headlights are turned on.

**AUTO DISPLAY GPS SCREEN** - Toggles auto display GPS screen (10 secs) on/off. DEFAULT = OFF.

**GPS AUDIO** - Toggles GPS sound on/off. DEFAULT = ON.

**SETUP MENU PAGE 2**



**NEXT / PREV** - press to access next / previous page of setup

**iPOD** - Toggles iPOD integration on/off. If this option is OFF, the iPOD icon in the main menu turns into a AUX icon. DEFAULT = ON.

**REARVIEW CAMERA** - If turned on and correctly wired, when you engage the reverse gear, the vehicles reverse camera will be displayed.

**24 HOUR CLOCK** - If turned on, the main menu's clock will be displayed in 24 hour format.

**STATE RADIO** - Will change the radio's frequency jump increments when seeking a station. Country dependent. For Australia leave blank or set to China.

**START VOLUME** - Set to either remember the vehicles last volume setting upon restart of the unit, or set to a preset starting volume. Volume range 10-40

**SETUP MENU PAGE 3**



**PREVIOUS** - press to access next / previous page of setup

**WHEEL BUTTONS** - Steering wheel code. Must be matched to vehicle to ensure proper operation.

**CONTROL PANEL LIGHTS (4-20)** - Set the Front fascia backlight intensity. = MIN / 20 = MAX.

**SYSTEM TIME** - Set the system time, displayed on the main menu.

**SYSTEM RESET** - Resets the system.

 
**INFO MENU (TPMS) NOT AVAILABLE**

TPMS (TYRE PRESSURE MONITORING SYSTEM) is not available.

**REVERSE CAMERA OPERATION**

When a receiver camera is connected to the 7500 series, select reverse gear & the camera image will automatically be displayed.

When the video signal for reverse camera is not connected, the following warning will be displayed. Check the video signal input from the camera to the system.

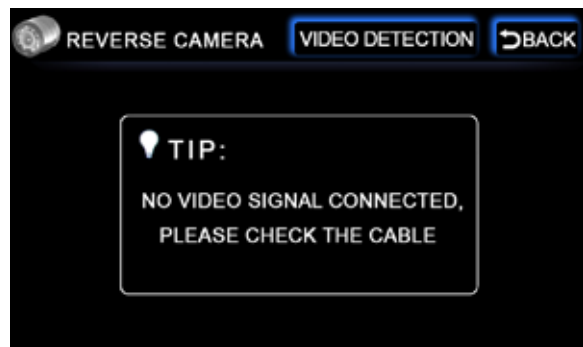

## IMPORTANT INFORMATION

**MAP DATA INFORMATION:** One of the goals of the product is to provide customers with the most complete and accurate cartography that is available to us at a reasonable cost. Along with VMS' extensive field work, we use a combination of governmental and private data sources, which we identify in product literature and copyright messages displayed to the consumer. Virtually all data sources contain some inaccurate or incomplete data. In some countries, complete and accurate map information is either not available or is prohibitively expensive.

## DECLARATION OF CONFORMITY

Hereby, VMS declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. FCC Compliance This product has been tested and found to comply with Part 15 of the FCC interference limits for Class B digital devices FOR HOME OR OFFICE USE. These limits are designed to provide reasonable protection against harmful interference in a residential installation, and are more stringent than 'outdoor' requirements.

Operation of this device is subjected to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This product does not contain any user-serviceable parts. Repairs should only be made by an authorised VMS service centre. Unauthorised repairs or modifications could result in permanent damage to the equipment, and void your warranty and your authority to operate this device under Part 15 regulations.

## WARRANTY TERMS AND CONDITIONS

### Limited Warranty

1. This VMS product is warranted to be free from defects in materials or workmanship for 12 month from the date of purchase. Within this period, VMS will, at its sole option, repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labour, provided that the customer shall be responsible for any transportation costs. This warranty does not cover failures due to abuse, misuse, accident, or unauthorised alterations or repairs. Batteries included are not covered by any warranty.
2. This warranty is valid only for Products purchased new and unused in Australia or New Zealand from VMS AUSTRALIA, or an authorised dealer. The customer must provide the original proof of purchase from one of those organisations to receive any services under this warranty.
3. This warranty only applies where a **HARDWARE** defect has arisen, wholly or substantially, as a result of faulty manufacture, parts or labor. The warranty does not apply where damage is caused by other factors, including without limitation:
  - (a) Normal wear and tear.
  - (b) Abuse, mishandling, accident or failure to follow operating instructions.
  - (c) Incorrect installation.
  - (d) Exposure to liquid or infiltration of foreign particles.
  - (e) Servicing or modification of the product by any one other than by VMS AUSTRALIA .
  - (f) Use of product with other accessories, attachments, product supplies, parts or devices (including batteries, memory cards) that do not conform to VMS specifications; or
  - (g) Shipment or other transit.
  - (h) Faulty units may only be replaced with a new unit provided the unit is returned to your authorised dealer within 7 days. After this 7 day period, units will be repaired.
4. This warranty does not cover:
  - (a) 3rd party software(s) such as navigation application(s) and map data packaged with the product. For software & data warranty term and conditions, refer to the EULA contained in the software package.
  - (b) The replacement of any consumable such as batteries.
  - (c) The cost of transit of the Product to or from VMS AUSTRALIA.
  - (d) Repair or replacement of any Product damaged during transit to or from VMS; or
  - (e) Any loss or consequential damage incurred while the Product is being repaired; or
  - (f) installation and uninstallation labour cost
  - (g) Loss of data stored on the SD card or internal memory. It is the users responsibility to backup any data contained on the card and this include navigation software applications and user's own data.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE. IN NO EVENT SHALL VMS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT OR FROM DEFECTS IN THE PRODUCT.

Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you. VMS retains the exclusive right to repair or replace the unit or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY. To obtain warranty service, contact your local VMS dealer or call VMS product support to obtain a WARRANTY CLAIM report. Complete the report in full & Fax ( +61 3 9587 8040) the form to VMS for approval. Once approved, VMS will issue a RA number & shipping instructions. Securely pack the unit and a copy of the original sales receipt, which is required as the proof of purchase for warranty repairs. Write the RA number clearly on the outside of the package. Send the unit, freight charges prepaid to any VMS service centre.

Online Auction Purchases: Products sold through online auctions are not eligible for rebates or other special offers from VMS. Online auction confirmations are not accepted for warranty verification. To obtain warranty service, an original or copy of the sales receipt from the original retailer is required. VMS will not replace missing components from any package purchased through an online auction.



[www.vms4x4.com](http://www.vms4x4.com)

August 2011 / Rev 1.3

Printed in Australia

VMS © is a trademark of XIA GROUP PTY LTD, registered in Australia and other countries and may not be used without the express permission of XIA GROUP Pty Ltd.

Copyright © 2011. All rights reserved