


## Holden Colorado 2012+ SWC Control wires Connection Instructions

Wire to use on the wiring plug shown in the photo (at the vehicle end):

- GREEN with a white trace
- WHITE with a red trace

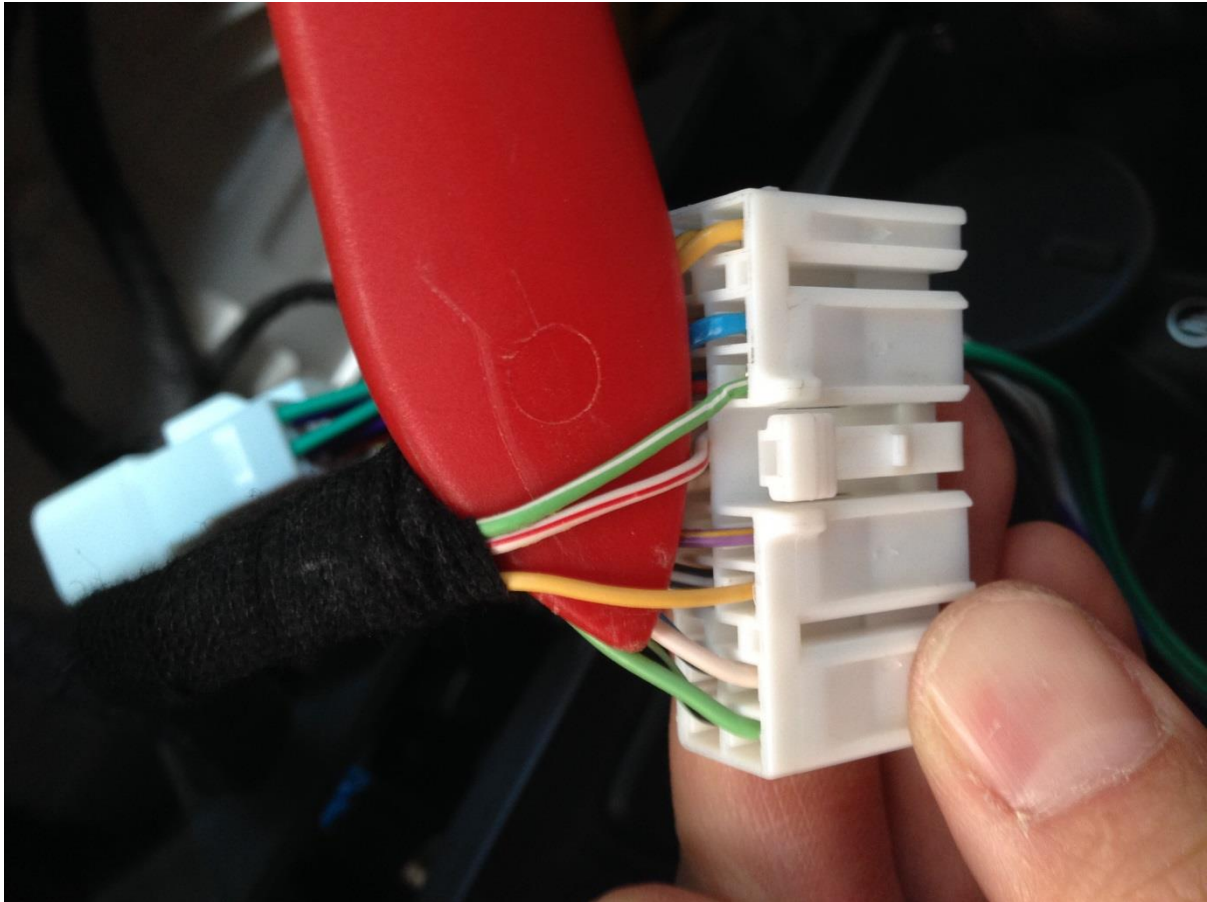

1. Join Key 1 (from the VMS plug) to White w/ red trace wire
2. Power unit it on and go into SWC mode
3. Press volume up on the unit to learn
4. Whilst holding volume up on the steering wheel, tap the Green w/ white trace to ground wire (at the VMS plug)
5. Continue with rest of the functions
6. When all functions have been learnt, connect the Green w/ white trace to ground.