




TOYOTA LANDCRUISER 200 FITMENT MODIFICATION

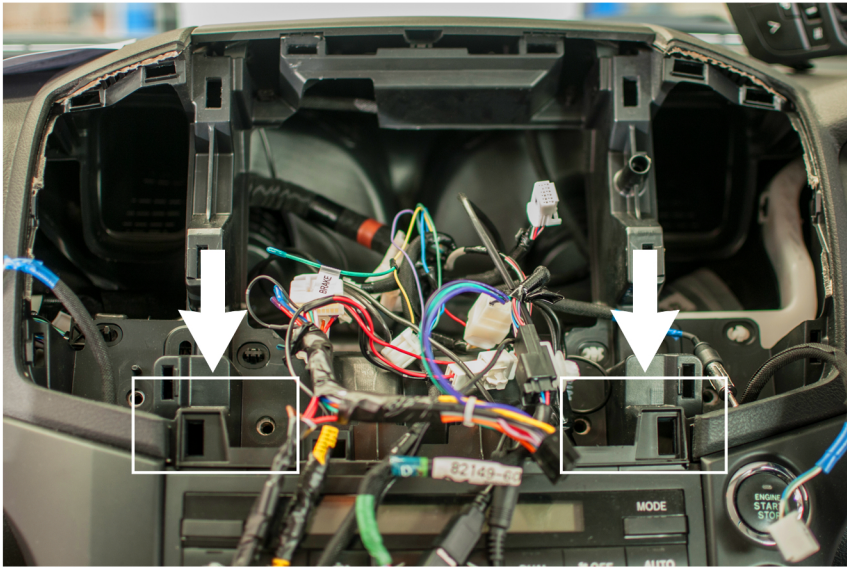

Some 200 series may have an extra piece of abs plastic on the facia mounts that needs to be removed for a flush fit.



You can see in this image where the new facia makes contact with plastic. A small section must be trimmed away, from just below the mark, across to the outer edge.



The final result should look like this. This needs to be done on both sides