


## Toyota 200 series original camera adapter wiring instruction


### Step 1

After removing original Toyota radio locate Grey coloured camera lead with white four pin connector, normally towards passenger side of radio cavity.

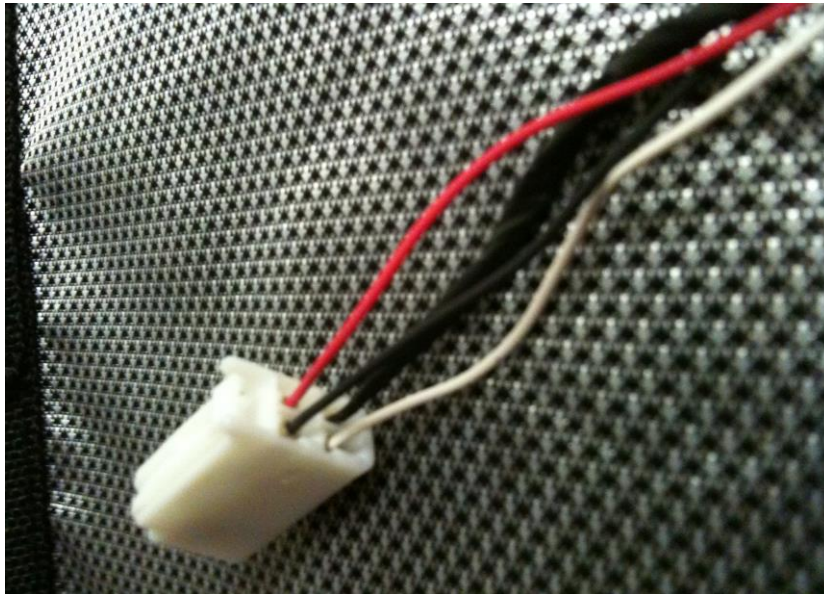

### Step 2

Plug in VMS Toyota OE camera adapter lead (shown above) into the white connector lead as shown below.

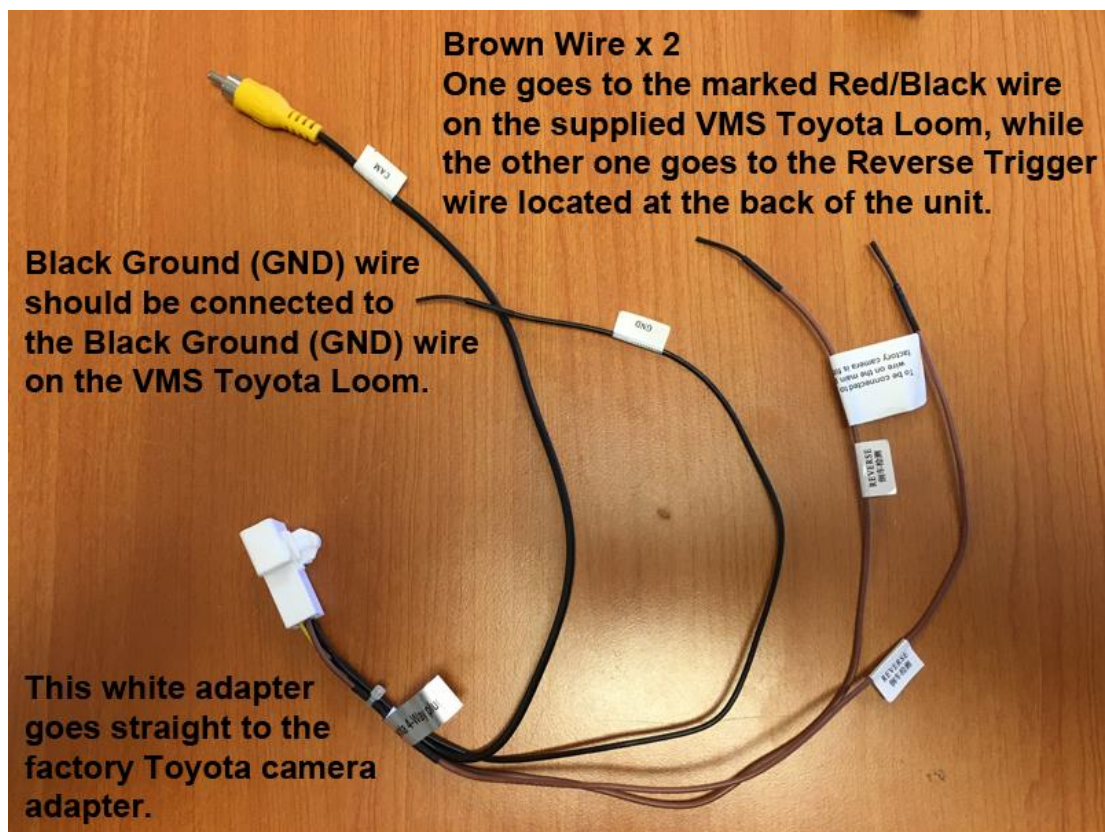

### Step 3


On the supplied VMS Camera Adaptor shown above, there are 2 **Brown Wires**, 1 **Black Wire** and a **Yellow** male RCA video connector.

#### **Brown Wires:**

The first Brown Wire (which is marked with a label) should be connected to the Black/Red wire on the supplied VMS Power Loom as shown below.  
The second Brown Wire (marked GND) should be connected to the wire marked “Reverse” or “Back” which can be located at the back of the unit, this is a physical reverse trigger wire.

#### **Black Wire:**

This Black Wire is a GROUND wire which should be connected to a spare Ground Wire which can be located on the supplied VMS Main Power Loom as shown below.

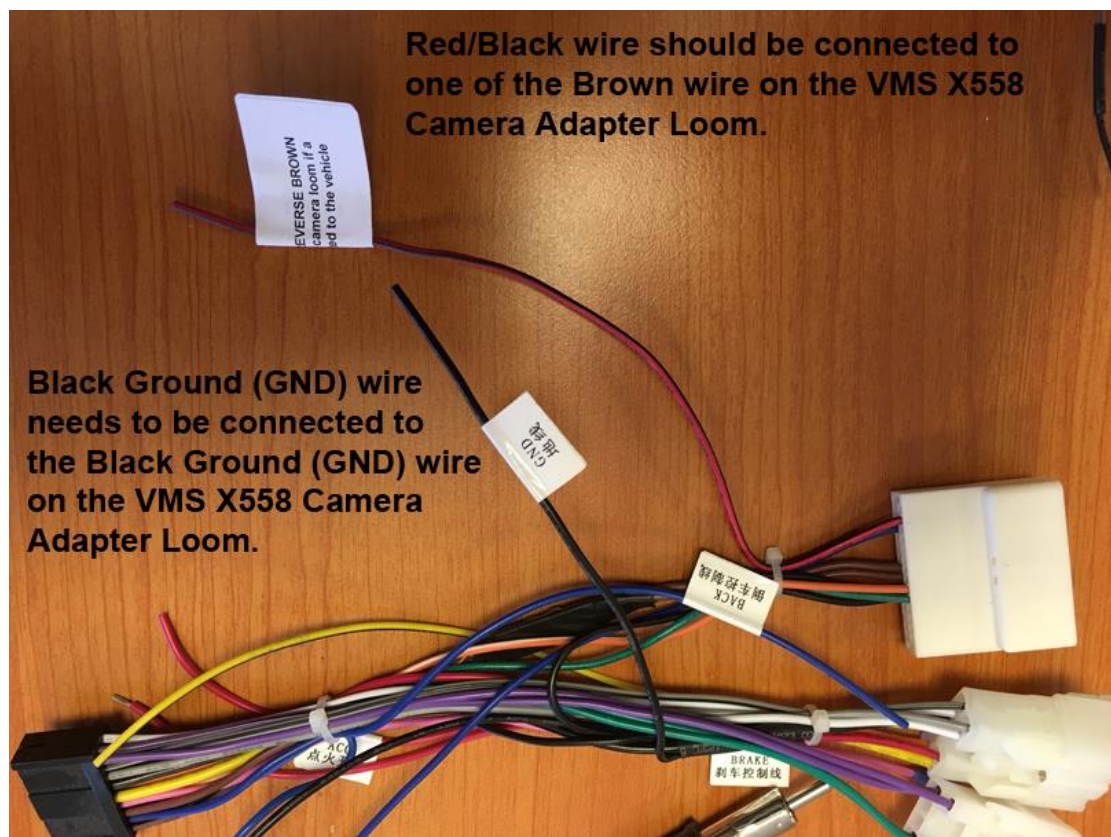

### Step 4

Plug the **Yellow** male RCA connector from supplied VMS Camera Adapter lead into the female RCA camera adaptor which can be located at the back of the unit.